




**Firmware Download Manual**  
**Ethernet Parallel Card**

**Rev. 5.00**


<http://www.bixon.com>

## Firmware Download


- 1) Turn on the printer
- 2) Execute **Configure Tool**.

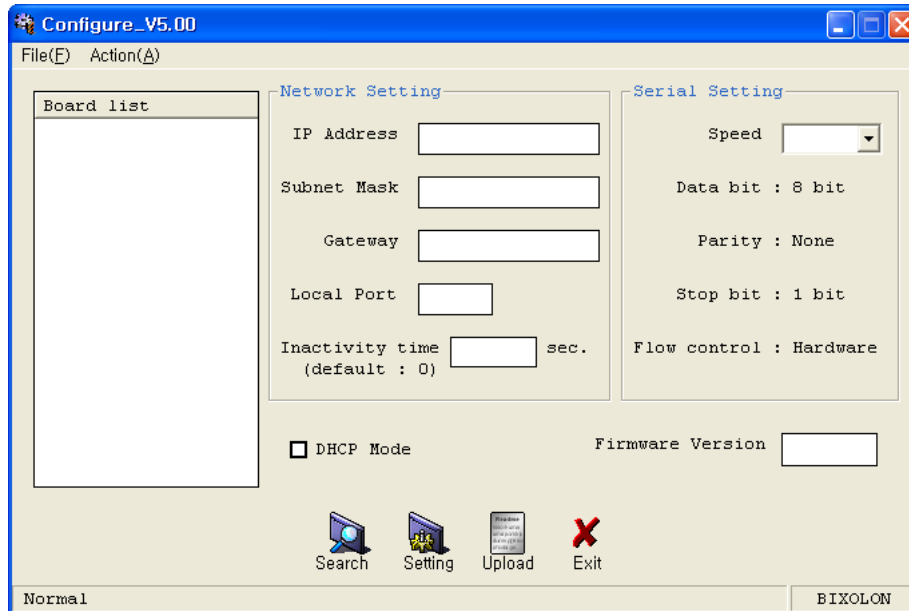

- 3) Click **Search**.

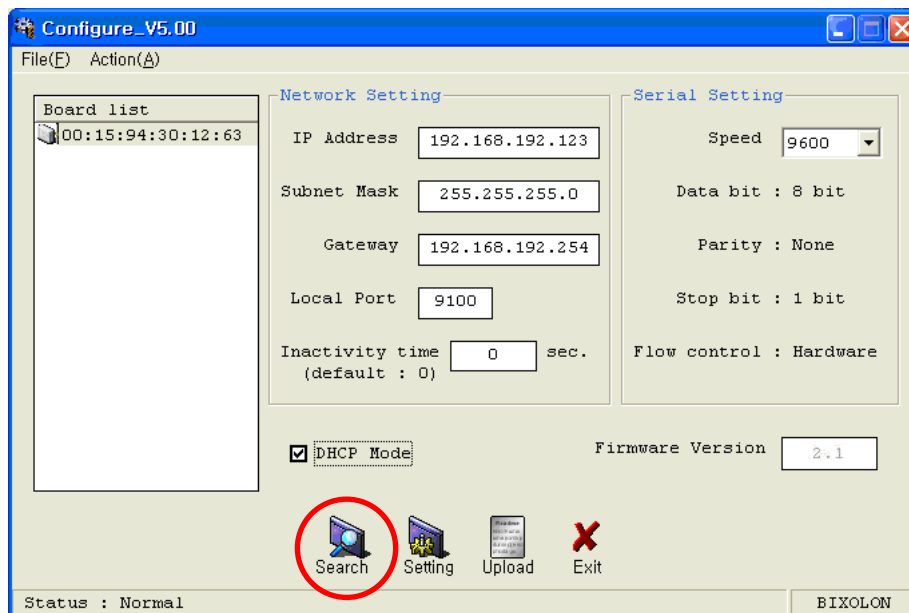


## 4) Select **MAC Address** in **Board**.

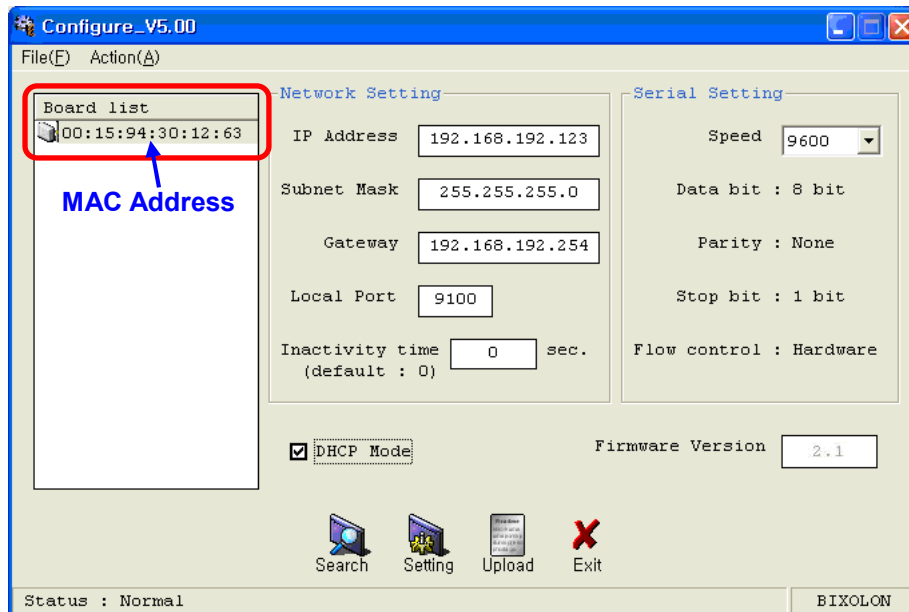

### **[Note]**

- If many MAC addresses appear, refer to the MAC address on the label of the interface card.

## 5) Click **Upload** and select file to download.

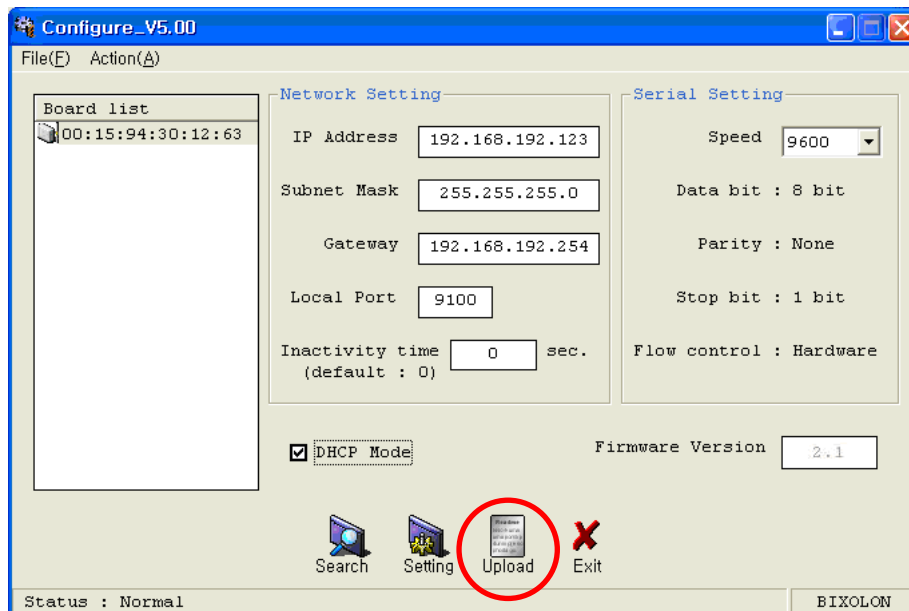

**[Note]**

- Check the extension of the file, which should be “bin”.


Successfully finished F/W update



Unsuccessfully finished F/W update



- 6) When firmware update finishes, click **Search** to check if Firmware is updated successfully.

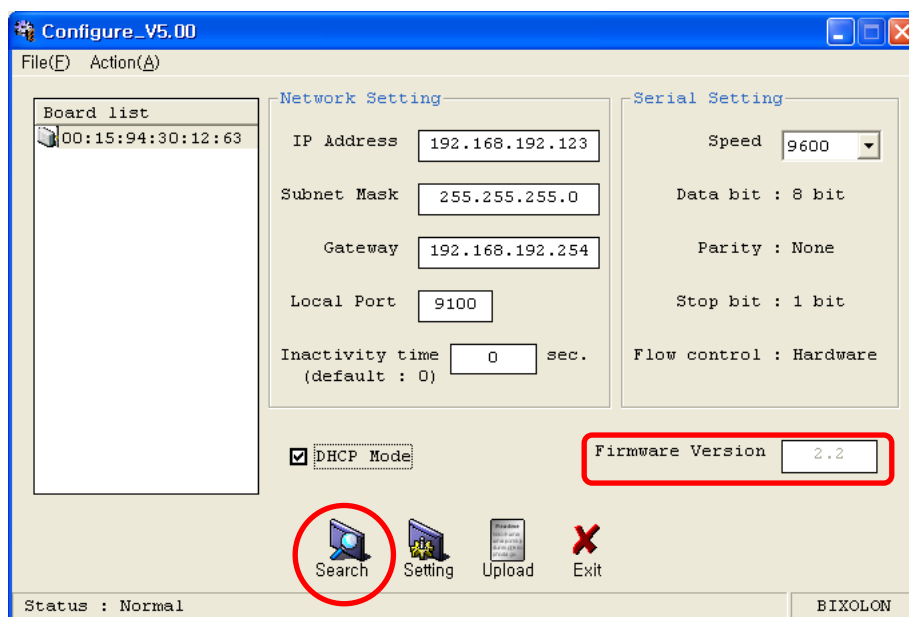

**[Note]**

- Don't turn off the printer while the firmware is updated. It causes fatal harm to interface card