


Code Reader 1000/1400/8000™ Configuration Guide



Code Reader 1000™



Code Reader 1400™

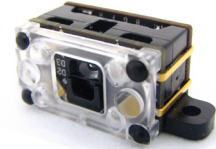

Code Reader 8000™



Table of Contents

USB Settings

USB Keyboard Mode.....	6 (A1)
USB Downloader Mode.....	6 (A2)
USB Virtual COM One Way Mode.....	6 (A3)
USB Native Two Way Mode.....	6 (A4)
USB HID POS (Terminal 1D 131).....	6 (B1)
Reset to USB Factory Defaults.....	6 (B2)

RS-232 Settings

RS-232 Raw Mode.....	6 (C1)
RS-232 Packet Mode.....	6 (C2)
Reset to RS-232 Factory Defaults.....	6 (C3)
RS-232 Interface - 7 Data Bits.....	6 (C4)
RS-232 Interface - 8 Data Bits - Default.....	6 (D1)
RS-232 Interface - 1200 Baud Rate.....	6 (D2)
RS-232 Interface - 2400 Baud Rate.....	6 (D3)
RS-232 Interface - 4800 Baud Rate.....	6 (D4)
RS-232 Interface - 9600 Baud Rate.....	6 (E1)
RS-232 Interface - 19200 Baud Rate.....	6 (E2)
RS-232 Interface - 38400 Baud Rate.....	6 (E3)
RS-232 Interface - 57600 Baud Rate.....	6 (E4)
RS-232 Interface - 115200 Baud Rate - Default.....	6 (F1)
RS-232 Interface - Even Parity.....	6 (F2)
RS-232 Interface - Odd Parity.....	6 (F3)
RS-232 Interface - No Parity - Default.....	6 (F4)

Continuous Trigger Optimization and Settings

Continuous Scan Both Imagers.....	7 (A1)
Continuous Scan Off - Default.....	7 (A2)

Motion Detection Scanning

Motion Detection On, Start Delay 0.....	7 (A3)
Motion Detection On, Start Delay 500mms.....	7 (A4)
Motion Detection On, Start Delay 0, Dark Environment.....	7 (B1)
Motion Detection On, Start Delay 500mms, Dark Environment.....	7 (B2)
Motion Detection Off.....	7 (B3)

Symbologies

Aztec On - Default.....	7 (C1)
Aztec Off.....	7 (C2)
Aztec Inverse On.....	7 (C3)
Aztec Inverse & Normal.....	7 (C4)
Codabar On - Default.....	7 (D1)
Codabar Off.....	7 (D2)
Codablock F On.....	7 (D3)
Codablock F Off - Default.....	7 (D4)
Code 11 On.....	7 (E3)
Code 11 Off - Default.....	7 (E4)
Code 11 - Checksum 1 digit.....	7 (F1)
Code 11 - Checksum 2 digit & Strip from Result.....	7 (F2)
Code 11 - Checksum 1 digit & Strip from Result.....	7 (F3)



Table of Contents

Code 39 On - Default.....	8 (A1)
Code 39 Off	8 (A2)
Code 39 Enable Checksum.....	8 (A3)
Code 39 Disable Checksum - Default	8 (A4)
Code 39 Enable Checksum and Strip	8 (B1)
Code 39 Extended Full ASCII On.....	8 (B2)
Code 39 Extended Full ASCII Off - Default	8 (B3)
Code 39 Short Margin On - Default	8 (B4)
Code 39 Short Margin Off.....	8 (C1)
Code 39 Trioptic On.....	8 (C2)
Code 39 Trioptic Off.....	8 (C3)
Code 93 On - Default.....	8 (D1)
Code 93 Off	8 (D2)
Code 128 On - Default	8 (D3)
Code 128 Off	8 (D4)
Code 128 Short Margin On - Default	8 (E1)
Code 128 Short Margin Off.....	8 (E2)
Composite On.....	8 (F3)
Composite Off - Default	8 (F4)
Data Matrix Rectangle On	9 (A1)
Data Matrix Rectangle Off - Default.....	9 (A2)
Data Matrix Inverse On.....	9 (A3)
Data Matrix Inverse Off - Default.....	9 (A4)
Enable improved reading capability for hard to decode Data Matrix symbols.....	9 (B3)
Disable improved reading capability for hard to decode Data Matrix symbols - Default	9 (B4)
GS1 Limited DataBar On.....	9 (C1)
GS1 DataBar 14/ Truncated 14 On	9 (C2)
GS1 DataBar Stacked On	9 (C3)
GS1 DataBar Expanded On	9 (C4)
All GS1 DataBar On - Default.....	9 (D1)
All GS1 DataBar Off	9 (D2)
Int 2 of 5 On - Default	9 (E1)
Int 2 of 5 Off.....	9 (E2)
Int 2 of 5 2 Digits On.....	9 (E3)
Int 2 of 5 2 Digits Off - Default	9 (E4)
Int 2 of 5 4 Digits On.....	9 (F1)
Int 2 of 5 4 Digits Off.....	9 (F2)
Int 2 of 5 with Control Character Stripped	9 (F3)
Maxicode On	10 (A1)
Maxicode Off - Default.....	10 (A2)
Matrix 2 of 5 On	10 (A3)
Matrix 2 of 5 Off - Default	10 (A4)
Micro PDF417 On.....	10 (B1)
Micro PDF417 Off - Default	10 (B2)
MSI Plessy On - Default	10 (B3)
MSI Plessy Off.....	10 (B4)
Macro PDF 417 On.....	10 (C3)
Macro PDF 417 Off - Default	10 (C4)
NEC 2 of 5 On - Default.....	10 (D1)
NEC 2 of 5 Off	10 (D2)
Disable OCR - Default.....	10 (D3)



Table of Contents

Enable OCR	10 (D4)
PDF 417 On - Default	10 (E1)
PDF 417 Off	10 (E2)
Postal Codes - Australian Post On	10 (F1)
Postal Codes - Japan Post On	10 (F2)
Postal Codes - KIX On	10 (F3)
Postal Codes - Postnet On	10 (F4)
Postal Codes - Planet On	11 (A1)
Postal Codes - Planet & Postnet On	11 (A2)
Postal Codes - Royal Mail On	11 (A3)
Postal Codes - 4 State CB On (intelligent mail)	11 (A4)
Postal Codes - All Postal Codes Off - Default	11 (B1)
QR Code On - Default	11 (B4)
QR Code Off	11 (C1)
QR Code Enable Checksum	11 (C2)
QR Code Disable Checksum	11 (C3)
QR Code Inverse and Standard On	11 (C4)
QR Code Inverse On	11 (D1)
Enable All QR Code On (includes Micro QR)	11 (D2)
Inverse and Micro QR Code On	11 (D3)
Telepen On - Default	11 (E1)
Telepen Off	11 (E2)
UPC On - Default	11 (E3)
UPC Off	11 (E4)
UPC Short Margin Enabled - Default	11 (F1)
UPC Short Margin Disabled	11 (F2)
UPC Extension On	11 (F3)
UPC Extension Off - Default	11 (F4)

Miscellaneous Settings

Reader ID and Firmware Version	12 (A1)
--------------------------------------	---------

Keyboard Mapping

Belgium Keyboard	12 (A3)
Swiss Keyboard	12 (A4)
US English Keyboard Mapping - Default No Leading 0	12 (B1)
US English Keyboard Mapping - Leading 0	12 (B2)
French Keyboard	12 (B3)
German Keyboard	12 (B4)
Japanese Keyboard	12 (C1)
Control Characters for Non Printable ASCII	12 (C2)
Universal Keyboard Mapping	12 (C3)

Operating System Settings

Enable Alternative OS (Windows CE/MAC/Linux)	12 (C4)
Disable Alternative OS	12 (D1)

Mirroring Settings

Mirroring On	12 (D2)
Mirroring Off - Default	12 (D3)



Table of Contents

Prefix/Suffix Settings

Prefix - Comma.....	12 (E1)
Prefix - Space.....	12 (E2)
Prefix - Tab (USB Keyboard Mode ONLY).....	12 (E3)
Prefix - Tab (RS-232 Mode ONLY).....	12 (E4)
Prefix - Erase/None - Default.....	12 (F1)
Prefix - CRLF (RS-232 Mode ONLY).....	12 (F2)
Suffix - Carriage Return (RS-232 Mode ONLY).....	12 (F3)
Suffix - Comma.....	12 (F4)
Suffix - Line Feed (RS-232 Mode ONLY).....	13 (A1)
Suffix - Carriage Return Line Feed (RS-232 Mode ONLY).....	13 (A2)
Suffix - Space.....	13 (A3)
Suffix - Enter (Keyboard Mode ONLY).....	13 (A4)
Suffix - Tab (USB Keyboard Mode ONLY).....	13 (B1)
Suffix - Tab (RS-232 Mode ONLY).....	13 (B2)
Suffix - Erase/None - Default.....	13 (B3)
Erase Prefix & Suffix Data.....	13 (B4)

Reader Text Commands

Reader Text Commands On.....	13 (C1)
Reader Text Commands Off - Default1.....	13 (C2)









Clear Reader

Clear All Stored Data and Images.....	13 (D1)
Clear all JavaScript Rules.....	13 (D2)



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

<p>USB Keyboard Mode</p>  <p>M0002_01</p> <p>A1</p>	<p>USB Downloader Mode</p>  <p>M0004_01</p> <p>A2</p>	<p>USB Virtual COM One Way Mode</p>  <p>M0005_01</p> <p>A3</p>	<p>USB Native Two Way Mode</p>  <p>M0006_01</p> <p>A4</p>
<p>USB HID POS (Terminal ID 131)</p>  <p>M0003_01</p> <p>B1</p>	<p>Reset to USB Factory Defaults</p>  <p>M0001_01</p> <p>B2</p>	<p>Intentionally Left Blank</p> <p>B3</p>	<p>Intentionally Left Blank</p> <p>B4</p>
<p>RS-232 Raw Mode</p>  <p>M0149_01</p> <p>C1</p>	<p>RS-232 Packet Mode</p>  <p>M0150_01</p> <p>C2</p>	<p>Reset to RS-232 Factory Defaults</p>  <p>M0017_01</p> <p>C3</p>	<p>RS-232 Interface 7 Data Bits</p>  <p>M0018_01</p> <p>C4</p>
<p>RS-232 Interface 8 Data Bits - Default</p>  <p>M0019_01</p> <p>D1</p>	<p>RS-232 Interface 1200 Baud Rate</p>  <p>M0020_01</p> <p>D2</p>	<p>RS-232 Interface 2400 Baud Rate</p>  <p>M0021_01</p> <p>D3</p>	<p>RS-232 Interface 4800 Baud Rate</p>  <p>M0022_01</p> <p>D4</p>
<p>RS-232 Interface 9600 Baud Rate</p>  <p>M0023_01</p> <p>E1</p>	<p>RS-232 Interface 19200 Baud Rate</p>  <p>M0024_01</p> <p>E2</p>	<p>RS-232 Interface 38400 Baud Rate</p>  <p>M0025_01</p> <p>E3</p>	<p>RS-232 Interface 57600 Baud Rate</p>  <p>M0026_01</p> <p>E4</p>
<p>RS-232 Interface 115200 Baud Rate - Default</p>  <p>M0027_01</p> <p>F1</p>	<p>RS-232 Interface Even Parity</p>  <p>M0028_01</p> <p>F2</p>	<p>RS-232 Interface Odd Parity</p>  <p>M0029_01</p> <p>F3</p>	<p>RS-232 Interface No Parity - Default</p>  <p>M0030_01</p> <p>F4</p>



CR1000/CR1400/CR8000 Configuration Guide










NOTE: The configuration change will take effect immediately and saved to memory.

<p>Continuous Scan Both Imagers</p>  <p>M0127_02</p> <p>A1</p>	<p>Continuous Scan Off - Default</p>  <p>M0126_02</p> <p>A2</p>	<p>Motion Detection On, Start Delay 0</p>  <p>M0161_01</p> <p>A3</p>	<p>Motion Detection On, Start Delay 500mms</p>  <p>M0162_01</p> <p>A4</p>
<p>Motion Detection On, Start Delay 0, Dark Environment</p>  <p>M0163_01</p> <p>B1</p>	<p>Motion Detection On, Start Delay 500mms, Dark Environment</p>  <p>M0164_01</p> <p>B2</p>	<p>Motion Detection Scanning Off</p>  <p>M0129_06</p> <p>B3</p>	<p>Intentionally Left Blank</p> <p>B4</p>
<p>Aztec On - Default</p>  <p>M0033_01</p> <p>C1</p>	<p>Aztec Off</p>  <p>M0034_01</p> <p>C2</p>	<p>Aztec Inverse On</p>  <p>M0035_01</p> <p>C3</p>	<p>Aztec Inverse & Normal</p>  <p>M0036_01</p> <p>C4</p>
<p>Codabar On - Default</p>  <p>M0037_01</p> <p>D1</p>	<p>Codabar Off</p>  <p>M0038_01</p> <p>D2</p>	<p>Codablock F On</p>  <p>M0039_01</p> <p>D3</p>	<p>Codablock F Off - Default</p>  <p>M0040_01</p> <p>D4</p>
<p>Intentionally Left Blank</p> <p>E1</p>	<p>Intentionally Left Blank</p> <p>E2</p>	<p>Code 11 On</p>  <p>M0042_01</p> <p>E3</p>	<p>Code 11 Off - Default</p>  <p>M0041_01</p> <p>E4</p>
<p>Code 11 - Checksum 1 digit</p>  <p>M0043_01</p> <p>F1</p>	<p>Code 11 - Checksum 2 digit & Strip from Result</p>  <p>M0044_01</p> <p>F2</p>	<p>Code 11 - Checksum 1 digit & Strip from Result</p>  <p>M0045_01</p> <p>F3</p>	<p>Intentionally Left Blank</p> <p>F4</p>



CR1000/CR1400/CR8000 Configuration Guide




















NOTE: The configuration change will take effect immediately and saved to memory.

<p>Code 39 On - Default</p>  <p>M0046_01</p> <p>A1</p>	<p>Code 39 Off</p>  <p>M0047_01</p> <p>A2</p>	<p>Code 39 Enable Checksum</p>  <p>M0048_01</p> <p>A3</p>	<p>Code 39 Disable Checksum - Default</p>  <p>M0049_01</p> <p>A4</p>
<p>Code 39 Enable Checksum and Strip</p>  <p>M0050_01</p> <p>B1</p>	<p>Code 39 Extended Full ASCII On</p>  <p>M0051_01</p> <p>B2</p>	<p>Code 39 Extended Full ASCII Off - Default</p>  <p>M0052_01</p> <p>B3</p>	<p>Code 39 Short Margin On - Default</p>  <p>M0053_01</p> <p>B4</p>
<p>Code 39 Short Margin Off</p>  <p>M0054_01</p> <p>C1</p>	<p>Code 39 Trioptic On</p>  <p>M0056_01</p> <p>C2</p>	<p>Code 39 Trioptic Off</p>  <p>M0055_01</p> <p>C3</p>	<p>Intentionally Left Blank</p> <p>C4</p>
<p>Code 93 On - Default</p>  <p>M0059_01</p> <p>D1</p>	<p>Code 93 Off</p>  <p>M0060_01</p> <p>D2</p>	<p>Code 128 On - Default</p>  <p>M0061_01</p> <p>D3</p>	<p>Code 128 Off</p>  <p>M0062_01</p> <p>D4</p>
<p>Code 128 Short Margin On - Default</p>  <p>M0063_01</p> <p>E1</p>	<p>Code 128 Short Margin Off</p>  <p>M0064_01</p> <p>E2</p>	<p>Intentionally Left Blank</p> <p>E3</p>	<p>Intentionally Left Blank</p> <p>E4</p>
<p>Intentionally Left Blank</p> <p>F1</p>	<p>Intentionally Left Blank</p> <p>F2</p>	<p>Composite On</p>  <p>M0065_01</p> <p>F3</p>	<p>Composite Off - Default</p>  <p>M0066_01</p> <p>F4</p>



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

<p>Data Matrix Rectangle On</p>  <p>M0067_01</p> <p>A1</p>	<p>Data Matrix Rectangle Off - Default</p>  <p>M0068_01</p> <p>A2</p>	<p>Data Matrix Inverse On</p>  <p>M0069_01</p> <p>A3</p>	<p>Data Matrix Inverse Off - Default</p>  <p>M0070_01</p> <p>A4</p>
<p>Intentionally Left Blank</p> <p>B1</p>	<p>Intentionally Left Blank</p> <p>B2</p>	<p>Enable improved reading capability for hard to decode Data Matrix symbols</p>  <p>M0071_01</p> <p>B3</p>	<p>Disable improved reading capability for hard to decode Data Matrix symbols - Default</p>  <p>M0072_01</p> <p>B4</p>
<p>GS1 DataBar Limited On</p>  <p>M0112_01</p> <p>C1</p>	<p>GS1 DataBar 14/ Truncated 14 On</p>  <p>M0113_01</p> <p>C2</p>	<p>GS1 DataBar 14 Stacked On</p>  <p>M0114_01</p> <p>C3</p>	<p>GS1 DataBar Expanded On</p>  <p>M0115_01</p> <p>C4</p>
<p>All GS1 DataBar On - Default</p>  <p>M0116_01</p> <p>D1</p>	<p>All GS1 DataBar Off</p>  <p>M0117_01</p> <p>D2</p>	<p>Intentionally Left Blank</p> <p>D3</p>	<p>Intentionally Left Blank</p> <p>D4</p>
<p>Int 2 of 5 On - Default</p>  <p>M0073_01</p> <p>E1</p>	<p>Int 2 of 5 Off</p>  <p>M0074_01</p> <p>E2</p>	<p>Int 2 of 5 2 Digits On</p>  <p>M0075_01</p> <p>E3</p>	<p>Int 2 of 5 2 Digits Off - Default</p>  <p>M0076_01</p> <p>E4</p>
<p>Int 2 of 5 4 Digits On</p>  <p>M0077_01</p> <p>F1</p>	<p>Int 2 of 5 4 Digits Off</p>  <p>M0078_01</p> <p>F2</p>	<p>Int 2 of 5 with Control Character Stripped</p>  <p>M0151_01</p> <p>F3</p>	<p>Intentionally Left Blank</p> <p>F4</p>



CR1000/CR1400/CR8000 Configuration Guide






















NOTE: The configuration change will take effect immediately and saved to memory.

<p>Maxicode On</p>  <p>M0079_01</p> <p>A1</p>	<p>Maxicode Off - Default</p>  <p>M0080_01</p> <p>A2</p>	<p>Matrix 2 of 5 On</p>  <p>M0081_01</p> <p>A3</p>	<p>Matrix 2 of 5 Off Default</p>  <p>M0082_01</p> <p>A4</p>
<p>Micro PDF417 On</p>  <p>M0083_01</p> <p>B1</p>	<p>Micro PDF417 Off - Default</p>  <p>M0084_01</p> <p>B2</p>	<p>MSI Plessey On - Default</p>  <p>M0085_01</p> <p>B3</p>	<p>MSI Plessey Off</p>  <p>M0086_01</p> <p>B4</p>
<p>Intentionally Left Blank</p> <p>C1</p>	<p>Intentionally Left Blank</p> <p>C2</p>	<p>Macro PDF 417 On</p>  <p>M0093_01</p> <p>C3</p>	<p>Macro PDF 417 Off - Default</p>  <p>M0094_01</p> <p>C4</p>
<p>NEC 2 of 5 On - Default</p>  <p>M0087_01</p> <p>D1</p>	<p>NEC 2 of 5 Off</p>  <p>M0088_01</p> <p>D2</p>	<p>Disable OCR - Default</p>  <p>M0089_01</p> <p>D3</p>	<p>Enable OCR</p>  <p>M0090_01</p> <p>D4</p>
<p>PDF 417 On - Default</p>  <p>M0091_01</p> <p>E1</p>	<p>PDF 417 Off</p>  <p>M0092_01</p> <p>E2</p>	<p>Intentionally Left Blank</p> <p>E3</p>	<p>Intentionally Left Blank</p> <p>E4</p>
<p>Postal Codes Australian Post On</p>  <p>M0095_01</p> <p>F1</p>	<p>Postal Codes Japan Post On</p>  <p>M0096_01</p> <p>F2</p>	<p>Postal Codes KIX On</p>  <p>M0097_02</p> <p>F3</p>	<p>Postal Codes Postnet On</p>  <p>M0099_01</p> <p>F4</p>



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

<p>Postal Codes Planet On</p>  <p>M0098_01</p> <p>A1</p>	<p>Postal Codes Planet & Postnet On</p>  <p>M0100_01</p> <p>A2</p>	<p>Postal Codes Royal Mail On</p>  <p>M0101_01</p> <p>A3</p>	<p>4-State CB On (Intelligent Mail)</p>  <p>M0103_01</p> <p>A4</p>
<p>Postal Codes All Postal Codes Off - Default</p>  <p>M0102_01</p> <p>B1</p>	<p>Intentionally Left Blank</p> <p>B2</p>	<p>Intentionally Left Blank</p> <p>B3</p>	<p>QR Code On - Default</p>  <p>M0104_01</p> <p>B4</p>
<p>QR Code Off</p>  <p>M0105_01</p> <p>C1</p>	<p>QR Code Enable Checksum</p>  <p>M0106_01</p> <p>C2</p>	<p>QR Code Disable Checksum</p>  <p>M0107_01</p> <p>C3</p>	<p>QR Code Inverse and Standard On</p>  <p>M0109_01</p> <p>C4</p>
<p>QR Code Inverse On</p>  <p>M0108_01</p> <p>D1</p>	<p>Enable All QR Code On (includes Micro QR)</p>  <p>M0110_01</p> <p>D2</p>	<p>Inverse and Micro QR Code On</p>  <p>M0111_01</p> <p>D3</p>	<p>Intentionally Left Blank</p> <p>D4</p>
<p>Telepen On - Default</p>  <p>M0118_01</p> <p>E1</p>	<p>Telepen Off</p>  <p>M0119_01</p> <p>E2</p>	<p>UPC On - Default</p>  <p>M0120_01</p> <p>E3</p>	<p>UPC Off</p>  <p>M0121_01</p> <p>E4</p>
<p>UPC Short Margin Enabled - Default</p>  <p>M0122_01</p> <p>F1</p>	<p>UPC Short Margin Disabled</p>  <p>M0123_01</p> <p>F2</p>	<p>UPC Extension On</p>  <p>M0124_01</p> <p>F3</p>	<p>UPC Extension Off - Default</p>  <p>M0125_01</p> <p>F4</p>



CR1000/CR1400/CR8000 Configuration Guide



NOTE: The configuration change will take effect immediately and saved to memory.

<p>Reader ID and Firmware Version</p>  <p>M0148_01</p> <p style="text-align: right;">A1</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">A2</p>	<p>Belgium Keyboard</p>  <p>M767_02</p> <p style="text-align: right;">A3</p>	<p>Swiss Keyboard</p>  <p>M795_01</p> <p style="text-align: right;">A4</p>
<p>US English Keyboard Mapping - Default No Leading 0</p>  <p>M0008_02</p> <p style="text-align: right;">B1</p>	<p>US English Keyboard Mapping - Leading 0</p>  <p>M0007_02</p> <p style="text-align: right;">B2</p>	<p>French Keyboard</p>  <p>M0010_01</p> <p style="text-align: right;">B3</p>	<p>German Keyboard</p>  <p>M0011_01</p> <p style="text-align: right;">B4</p>
<p>Japanese Keyboard</p>  <p>M0012_01</p> <p style="text-align: right;">C1</p>	<p>Control Characters for Non Printable ASCII</p>  <p>M0009_02</p> <p style="text-align: right;">C2</p>	<p>Universal Keyboard Mapping</p>  <p>M0013_01</p> <p style="text-align: right;">C3</p>	<p>Enable Alternative OS (Windows CE/MAC/Unix/Linux)</p>  <p>M0015_01</p> <p style="text-align: right;">C4</p>
<p>Disable Alternative OS</p>  <p>M0016_01</p> <p style="text-align: right;">D1</p>	<p>Mirroring On</p>  <p>M0152_01</p> <p style="text-align: right;">D2</p>	<p>Mirroring Off - Default</p>  <p>M0153_01</p> <p style="text-align: right;">D3</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">D4</p>
<p>Prefix - Comma</p>  <p>M0130_02</p> <p style="text-align: right;">E1</p>	<p>Prefix - Space</p>  <p>M0131_02</p> <p style="text-align: right;">E2</p>	<p>Prefix - Tab (USB Keyboard Mode ONLY)</p>  <p>M0132_02</p> <p style="text-align: right;">E3</p>	<p>Prefix - Tab (RS-232 Mode ONLY)</p>  <p>M0133_02</p> <p style="text-align: right;">E4</p>
<p>Prefix - Erase/None - Default</p>  <p>M0134_02</p> <p style="text-align: right;">F1</p>	<p>Prefix - CRLF RS232 Only</p>  <p>M0135_02</p> <p style="text-align: right;">F2</p>	<p>Suffix - Carriage Return RS232 Only</p>  <p>M0136_02</p> <p style="text-align: right;">F3</p>	<p>Suffix - Comma</p>  <p>M0137_02</p> <p style="text-align: right;">F4</p>



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

<p>Suffix - Line Feed RS232 Only</p>  <p>M0138_02</p> <p style="text-align: right;">A1</p>	<p>Suffix - Carriage Return Line Feed RS232 Only</p>  <p>M0139_02</p> <p style="text-align: right;">A2</p>	<p>Suffix - Space</p>  <p>M0140_02</p> <p style="text-align: right;">A3</p>	<p>Suffix - Enter Keyboard Only</p>  <p>M0141_02</p> <p style="text-align: right;">A4</p>
<p>Suffix - Tab (USB Keyboard Mode Only)</p>  <p>M0142_02</p> <p style="text-align: right;">B1</p>	<p>Suffix - Tab (RS-232 Mode Only)</p>  <p>M0143_02</p> <p style="text-align: right;">B2</p>	<p>Suffix - Erase/None - Default</p>  <p>M0144_02</p> <p style="text-align: right;">B3</p>	<p>Erase All Prefix & Suffix Data</p>  <p>M0145_02</p> <p style="text-align: right;">B4</p>
<p>Reader Text Commands On</p>  <p>M0146_01</p> <p style="text-align: right;">C1</p>	<p>Reader Text Commands Off - Default</p>  <p>M0147_01</p> <p style="text-align: right;">C2</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">C3</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">C4</p>
<p>Clear All Stored Data and Images</p>  <p>M0071_01</p> <p style="text-align: right;">D1</p>	<p>Clear All JavaScript Rules</p>  <p>M0165_01</p> <p style="text-align: right;">D2</p>	<p>Save Settings</p>  <p>M0166_01</p> <p style="text-align: right;">D3</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">D4</p>
<p>Intentionally Left Blank</p> <p style="text-align: right;">E1</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">E2</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">E3</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">E4</p>
<p>Intentionally Left Blank</p> <p style="text-align: right;">F1</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">F2</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">F3</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">F4</p>

