

**Default settings:** Move switch to “*SETUP*”

SOFTWARE VERSION 2.1.0 2010/06/25  
 Model : BT-232  
 Device Name : BT-232 V4.0  
 Authentication : OFF  
 Connection Mode : 1:1  
 Local BD\_ADDR : **0001952D548D**  
 Remote BD\_ADDR : 0001952D548C  
 COM Port : 9600 8-N-1 Flow Control: DTR/DSR  
 Factory Settings : 9600 8-N-1 Flow Control: None  
 Class of Device : 001F00  
 Low Power Mode : OFF  
 Pairing role : **Master**  
 AT Response : OFF

**Commands**

```

COMMAND LISTS
[CONNECTION CONFIGURATION]
A : Remote BD_ADDR      E : Authentication      K : Low Power Mode
M : Mode                N : Friendly Name      W : CoD

[SERIAL CONFIGURATION]
B : Baudrate            F : Flow Control        S : Stop Bit
P : Parity

[WAIT COMMAND]
G : Inquiry Timeout     H : Max Inquiry Num     Q : Connection Timeout
U : Cancel T & I        T : Connect             I : Search Device

[OTHERS]
V : Show current set    X : Reboot to apply     L : AT command response
R : Factory Reset      ?[command] : Command help
  
```

**CHANGES TO DO AFTER LOADING “DEFAULT SETTINGS”**

**Remote BD\_ADDR :** Type: *A 0001952D548D Enter* (BT-Master-Adresse)  
**Connecton Mode:** Type: *M 0 Enter* (Mode 1:1)  
**Speichern** Type: *X*  
**Switch:** Move switch to “*ACTIVE*”

SOFTWARE VERSION 2.1.0 2010/06/25  
 Model : BT-232  
 Device Name : BT-232 V4.0  
 Authentication : OFF  
**Connection Mode : 1:1**  
**Local BD\_ADDR : 0001952D548C**  
 Remote BD\_ADDR : 0001952D548D  
 COM Port : 9600 8-N-1 Flow Control: DTR/DSR  
 Factory Settings : 9600 8-N-1 Flow Control: None  
 Class of Device : 001F00  
 Low Power Mode : OFF  
 Pairing role : **Slave**  
 AT Response : OFF