


1. First, please check the printer driver version

1.1 Go to: Start, Control Panel, Printers and Faxes,

1.2 Right click on SII IFD00x

1.3 Properties

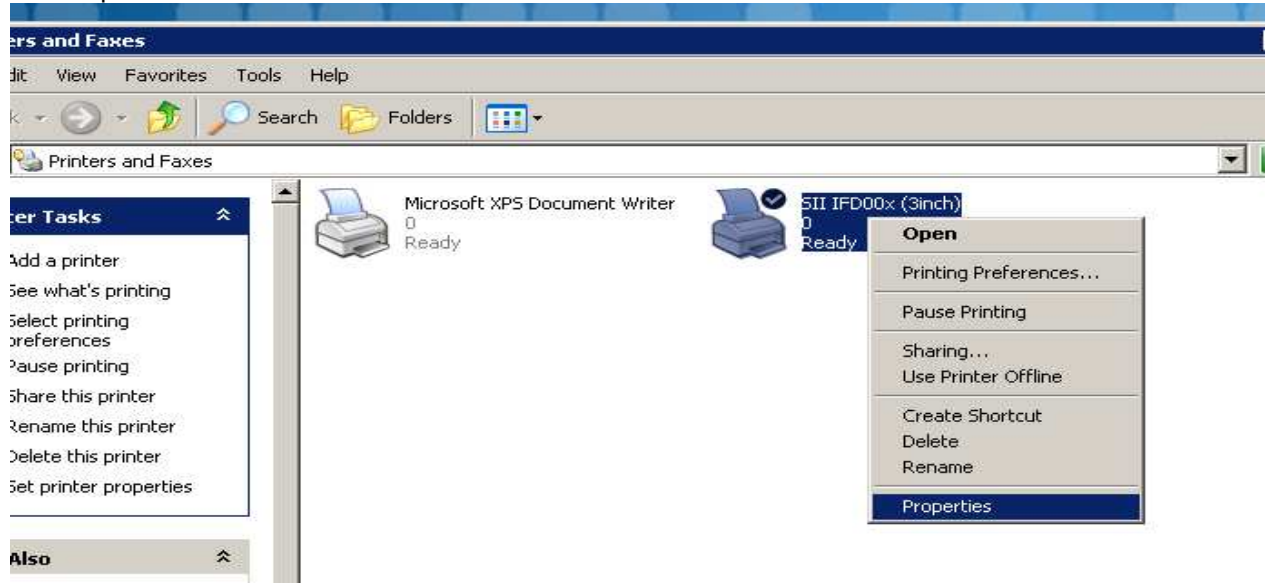

1.4 Go to register „System Information“

1.5 For using „cashdrawer.exe“ minimal Version is: 1.20 (4.347)



1.6 Are you using an older version, please delete this printer driver.

1.7 After deleting, right click on white space, Add Printer, follow the pictures below.

