

No 24, Lane 365, Yang Goang Street, Nei Hu District, Taipei 114, Taiwan, R.O.C Tel: 886 - 2 - 8751 -- 1111 Fax: 886 - 2 - 8751 -- 1199

# How TO Upload Logo Image And Print Logo

# On The PS3100 SOP

1. Please entry device manager and then select USB Printing Support → Update Driver



2. Please select "Install from a list or specific location(Advanced)" and then click Next



3. Please select "Don't search, I will choose the driver to install"

dware	Update Wizard
Please	choose your search and installation options.
0	Search for the best driver in these locations.
ľ	Use the check boxes below to limit or expand the default search, which includes local baths and removable media. The best driver found will be installed.
	Search removable media (floppy, CD-ROM)
	Include this location in the search:
	E:\ Browse
	Don't search I will choose the driver to install
( t	Choose this option to select the device driver from a list. Windows does not guarantee that he driver you choose will be the best match for your hardware.
	< Back Next > Cancel

#### 4. Please select "Have Disk"

ardware Update Wizard
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Show compatible hardware
Model
SI USB Printing Support Version: 5.1.2600.0 [7/1/2001]
USB Printing Support Version: 2.1.12.1 [1/7/2010]
🖙 This driver is digitally signed
Tell me why driver signing is important
< Back Next > Cancel

#### 5. Please select "Browse"



6. Please select driver path "Printer API v1.5\USB\_Printing\_Support" for install driver

Locate File					? 🔀
Look in:	🚞 USB_Printing	_Support	~	3 🦸 🖻	
My Recent Documents	USB_Printing_	Support			
Desktop					
My Documents					
My Computer					
	File name:	USB_Printing_Su	pport	~	Open
My Network	Files of type:	Setup Information	n (*.inf)	<b>V</b>	Cancel

#### 7.

7-1 Please entry (A) folder path

7-2 Please execute (B) printer test AP



## 8. Please select File→Open→Usb port

	Open 🕨	Rs232 Com port	
	Printer Initialize	Usb port	-
	Extension Memory Initialize		-
	Hardware Reset		
	Function Settings		
	Exit		
_			

9. Please select "Vid:0x619 Pid 0x016(rev:106) – USB Printing Support → "start""

🔡 Usb connect		
USB connect :		
	× (	Start
Vid:0x0619 Pid:0x0116 (rev:106) - USB Printing Support		

10. Please select "Image Function"→ "NV Bit Image Define" And then select logo image file to upload Logo image to CGROM

File       Image Function       String Function       Barcode       Auxiliary Function       Help         Text F       Downloaded Bit Image Registration       Image Define       IV       Image       Image         Image Bit Image Mode Print       Bit Image Mode Print       Image       Image       Image	📕 Min	ii-Pos Printer Te	esting Application	n		
Text I Downloaded Bit Image Registration Ima Ima Bit Image Mode Print Bit Image Mode Print	File	Image Function	String Function	Barcode	Auxiliary Function	Help
Bit Image Mode Print	Text I	Downloade NV Bit Ima	Downloaded Bit Image Registration NV Bit Image Define Bit Image Mode Print Downloaded Bit Image Print NV Bit Image Print			
NV Bit Image Print		Bit Image M Downloade NV Bit Ima				

#### 11. Logo upload successfully.



12. You are able to upload second logo to CG ROM



13. Please select "Image Function" → "NV Bit Image Print"

→"NV1"→"Normal mode printing" for print out NV1 logo

Note: If you want to print out NV2 logo, please select "NV2" → "Normal mode printing for print out NV2 logo."



## 14. Print out logo successfully.

