


Reset Zebra TLP-2844 über Windows Treiber

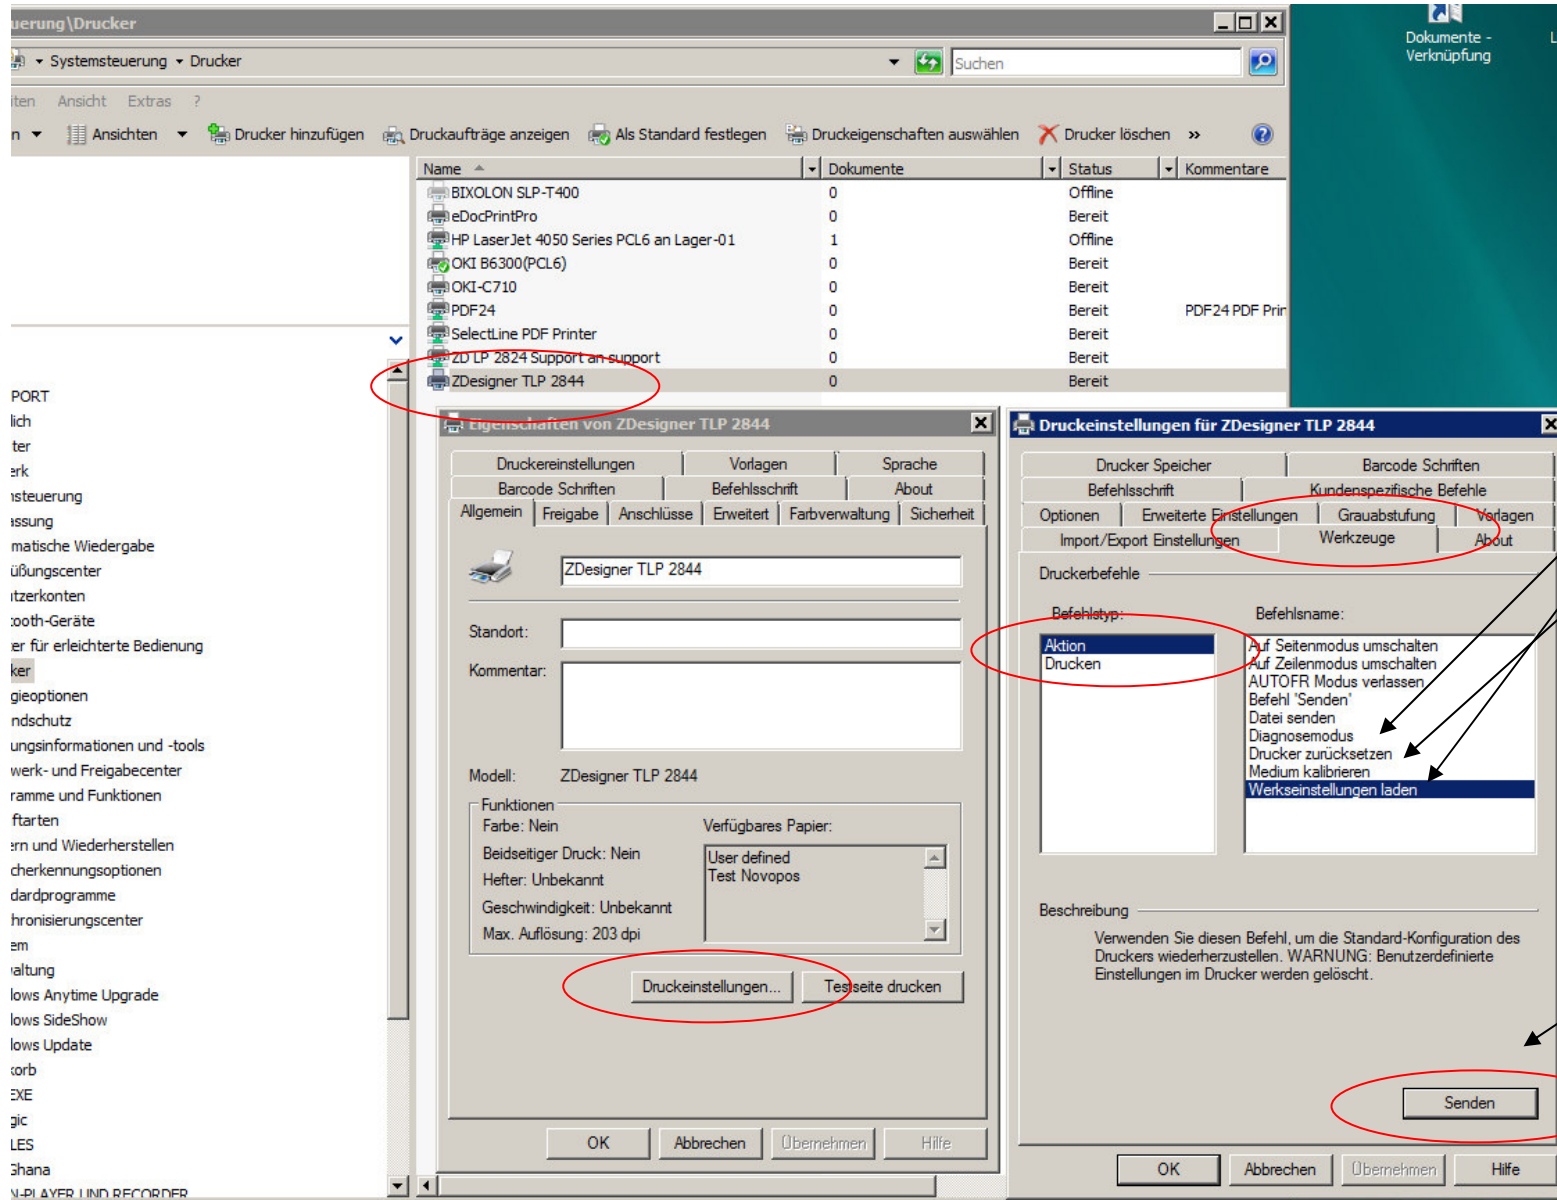

1. Reset
2. Default Setting
3. Calibrate

Reset, Senden
Default, Senden
Calibrate, Senden